



## Detects unusual pump operating conditions including dry-running and overload

**The DRN model protects equipment (including pumps) from damage!**

**Minimizes production downtime.**

**Identifies possible causes of alarms so they can be investigated and addressed.**

**Multiple Input** — Two analog, one digital, one temperature input and one current input

**Easy operation** — Equipped with EASY setup mode to remember the operation status and set the lower/upper limit values, as well as AUTO setup mode

**Bar graph** — Visible indication of current operating status

**Logging capability** — Data log feature for preventative maintenance scheduling

**Communication** — RS485 external communication capability

### Specifications

Model	DRN-01	DRN-02
Amperometric range	0.5–30.00A	5.0–200.0A
Unit's source voltage	AC100–240V 50/60Hz 10VA	
Operating temperature	0–40°C	
Operating humidity	35–85%RH	
Current sensor	JS10FL	JS24FL
Analog input 1	4–20mA or 1–5V	
Analog input 2	4–20mA or 1–5V	
Temperature range	-50–200°C (Pt100, K thermocouple)	
Digital contact input	No-voltage contact signal (also for external reset)	
Contact output	For pre-alarm: AC250V 8A (load resistance) 1c For pump-stopping: AC250V 8A (load resistance) 1a	
Logging capability	Past records (with the calendar)	
Communication	RS485 incorporated	
Supported models	MX, SMX, MXM, MDM, MDE, MDW	
External dimension in mm	D71 x W108 x H90	

\* Not used with inverter combination.


\* Safety: UL 61010-1

CAN/CSA-C22.2 No. 61010-1-12  
EN61010-1 EN61326-1, EN50581


\* EMC: EN61326-1

\* RoHS: EN50581

### Example

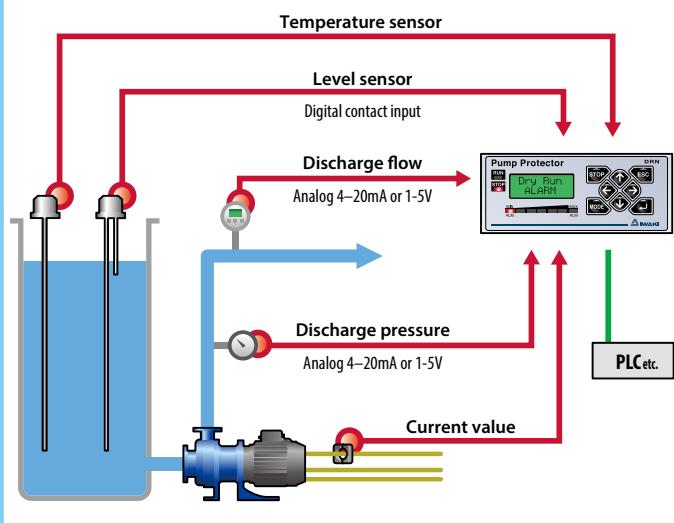


## Clamp-type current sensor for ease of installation

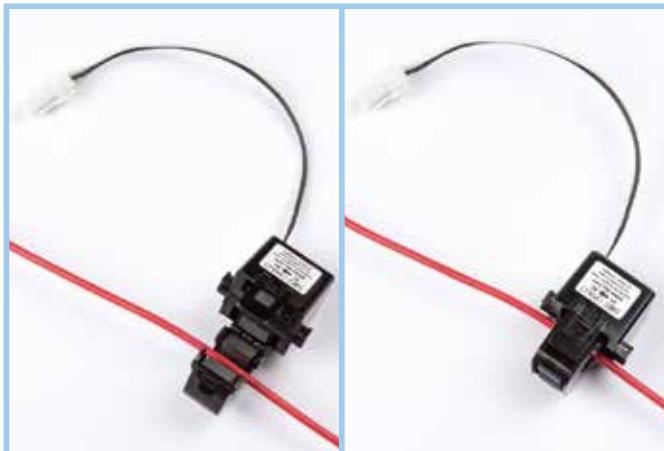

No modification of motor leads necessary.

## Improved operability and visibility

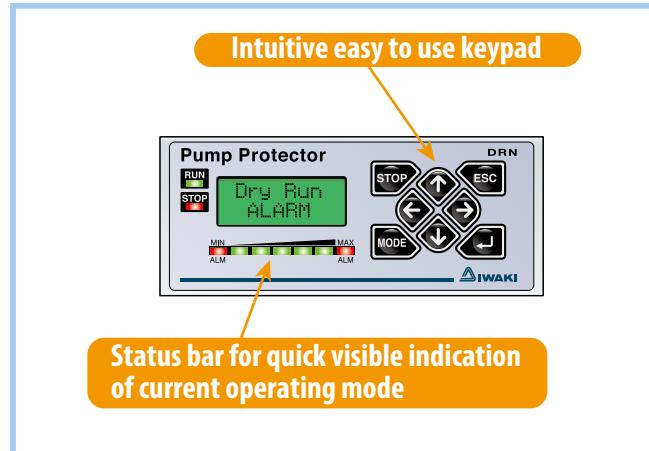

Normal operation : Green Signal  
Abnormal operation : Red Signal

## Features

Item	Description
<b>Input</b>	1. Motor current measurement (DRN-01: 0.5–30.00A, DRN-02: 5.0–200.0A)
	2. Discharge pressure measurement (4–20mA or 1–5V)
	3. Analog measurement (4–20mA or 1–5V)
	4. Temperature measurement (-50–200°C K-thermocouple or platinum resistance temperature detector Pt100)
	5. Digital contact input (for external reset, setup change or level sensor)
<b>Setup methods</b>	1. EASY setup (set lower/upper limits based on the logged pump status at low/high flow rate)
	2. AUTO setup (automatically set lower/upper limit based on normal pump status)
	3. MANUAL setup (manually set lower/upper limit)
<b>Bar graph display</b>	Visual indication of current pump operation within a programmed range
<b>Log review</b>	The built-in calendar enables review of various items, including:
	1. Time and cause of alarm (20 most recent alarms)
	2. Time of maintenance (10 most recent operations)
	3. Cumulative operating time of a pump and a DRN device
	4. Cumulative number of times MC relay and ALM relay are activated
	5. Setting
	6. Model
<b>Pre-alarm</b>	When measured value exceeds the pre-alarm set value, a pre-alarm is issued before stopping the pump.
<b>Pump-stopping output</b>	When measured value is out of the lower/upper limit range, the pump shut off relay is activated.
<b>Current offset</b>	Offsets the measured current value.
<b>Scaling</b>	Changes the measurement range and unit.
<b>Temperature offset</b>	Offsets the measured temperature.
<b>Maintenance time notice</b>	Displays a notification that the device should be maintained.
<b>Dual detection</b>	Monitors motor current and discharge pressure. When an alarm is activated for either, displays the assumed cause. (LowFlow, OverLoad, DryRun, HighFlow)
<b>Automatic cavitation detection</b>	Automatically detects cavitation and issues a warning.
<b>Communication</b>	RS485 communication.
<b>Other Features</b>	Keypad lock, Initialization.

IWAKI CO., LTD. 6-6 Kanda-Sudacho 2-chome Chiyoda-ku Tokyo 101-8558 Japan TEL : (81)3 3254 2935 FAX : 3 3252 8892 Please find your distributor location at [www.iwakipumps.jp](http://www.iwakipumps.jp)

European office : IWAKI Europe GmbH	TEL: (49)2154 9254 0	FAX: 2154 9254 48	U.S.A. : IWAKI America Inc.	TEL: (1)508 429 1440	FAX: 508 429 1386
Germany : IWAKI Europe GmbH	TEL: (49)2154 9254 50	FAX: 2154 9254 55	Argentina : IWAKI America Inc. (Argentina Branch)	TEL: (54)11 4749 4116	FAX: 19 3244 5900
Holland : IWAKI Europe GmbH (Netherlands Branch)	TEL: (31)74 2420011	FAX: (49)2154 925448	Brasil : IWAKI Do Brasil Comercio De Bombas Hidráulicas LTDA.	TEL: (55)19 3244 5900	FAX: 19 3244 5900
Italy : IWAKI Europe GmbH (Italy Branch)	TEL: (39)0444 371115	FAX: 0444 335350	Singapore : IWAKI Singapore Pte Ltd.	TEL: (65)6316 2028	FAX: 6316 3221
Spain : IWAKI Europe GmbH (Spain Branch)	TEL: (34)93 37 70 198	FAX: 93 47 40 991	Indonesia : IWAKI Singapore (Indonesia Office)	TEL: (62)21 6906606	FAX: 21 6906612
Belgium : IWAKI Belgium N.V.	TEL: (32)13 67 02 00	FAX: 13 67 20 30	Malaysia : IWAKI Sdn. Bhd.	TEL: (60)3 7803 8807	FAX: 3 7803 4800
Denmark : IWAKI Nordic A/S	TEL: (45)48 24 2345		Australia : IWAKI Pumps Australia Pty Ltd.	TEL: (61)2 9899 2411	FAX: 2 9899 2421
Finland : IWAKI Suomi Oy	TEL: (358)9 2745810		Hong Kong : IWAKI Pumps Co., Ltd.	TEL: (852)2607 1168	FAX: 2607 1000
France : IWAKI France S.A.	TEL: (33)1 69 63 33 70	FAX: 1 64 49 92 73	China : GTZ IWAKI Engineering & Trading Co., Ltd.	TEL: (86)20 84350603	FAX: 20 84359181
Norway : IWAKI Norge AS	TEL: (47)23 38 49 00		IWAKI Pumps (Shanghai) Co., Ltd.	TEL: (86)21 6272 7502	FAX: 21 6272 6929
Sweden : IWAKI Sverige AB	TEL: (46)8 511 72900		Korea : IWAKI Korea Co., Ltd.	TEL: (82)2 2630 4800	FAX: 2 2630 4801
		( )Country codes	Taiwan : IWAKI Pumps Taiwan Co., Ltd.	TEL: (886)2 8227 6900	FAX: 2 8227 6818
			Thailand : IWAKI (Thailand) Co.,Ltd.	TEL: (66)2 322 2471	FAX: 2 322 2477

**Caution for safety use:**  
Before use of pump, read instruction manual carefully to use the product correctly.

Actual pumps may differ from the photos. Specifications and dimensions are subject to change without prior notice. For further details please contact us.

**Legal attention related to export.**  
Our products and/or parts of products fall in the category of goods contained in control list of international regime for export control.  
Please be reminded that export license could be required when products are exported due to export control regulations of countries.

The posting and copying from this catalogue without permission is not accepted firmly.